



Eureka AirSpeed Bagless Zuum Vacuum Cyclone Replacement

If heavy debris cracks or damages the cyclone, this guide outlines the replacement of the vacuum's main suction component.

Written By: Celina Burchett



INTRODUCTION

If you determine that your vacuum is no longer picking up debris, this guide will help you to replace a damaged cyclone to increase the suction.



TOOLS:

- [T15 Security Torx Screwdriver](#) (1)
-

Step 1 — Cyclone



- Press the grey dust cup release button and gently pull the dust cup towards you.

Step 2



- Twist the large, black portion of the cyclone/dust cup to the right to unlock the black cover and cyclone from the clear dust cup.

Step 3



- Twist the clear collar to release the wash screen and small circular collar exposing the cyclone attached to the black head.

Step 4




- Lift the latch on the top of the black cyclone head to open. You can now see the foam filter inside the cyclone portion of the dust cup.

Step 5



- Remove the white filter by lifting the gray foam filter handle, exposing the screws attaching cyclone to the black head.

Step 6

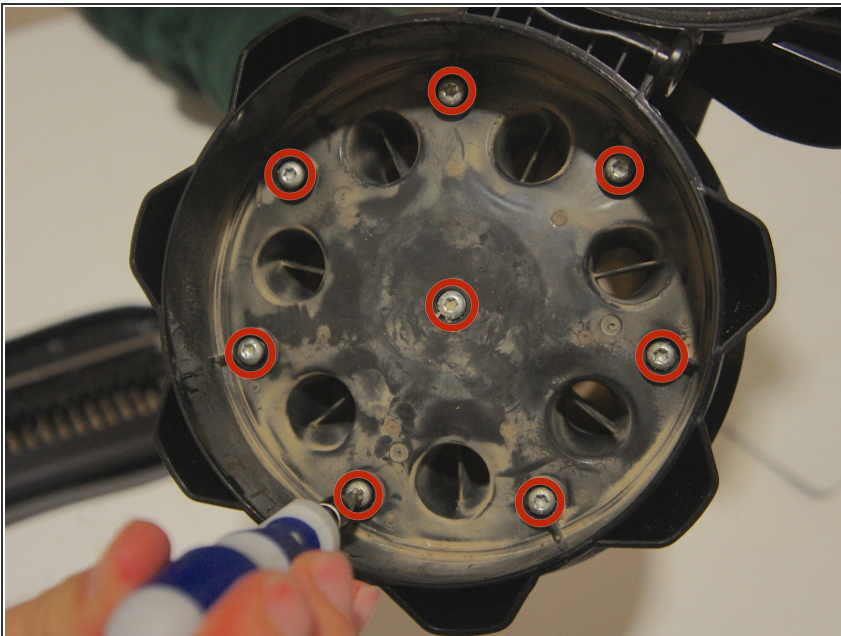

- Using a T15 Security Torx Screwdriver, remove the 8 screws.

Step 7



- Upon removal of the screws, the cyclone and black head cover will come apart.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 10:57:26 AM.